



# ICM HPM SETUP GUIDE

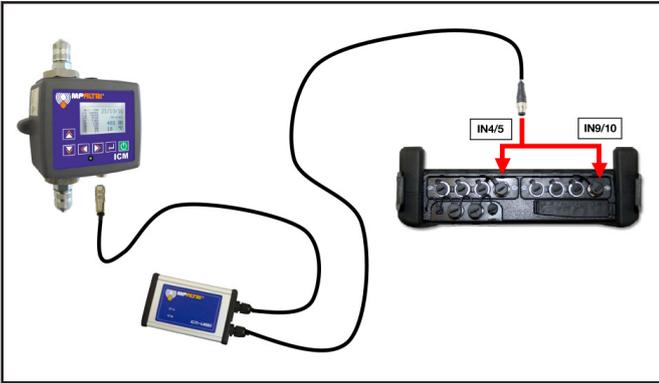


## HPM Configuration:


1. Switch the HPM6000 ON
2. Press the 'MENU' key.

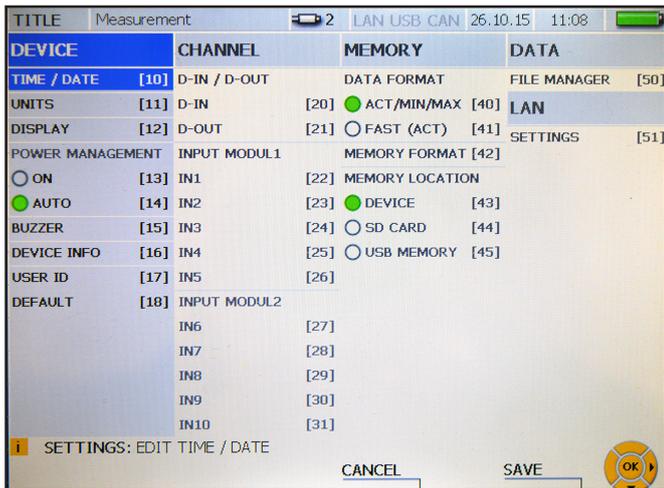

3. Go to the 'CHANNEL' menu and select 'IN4' or 'IN9'.

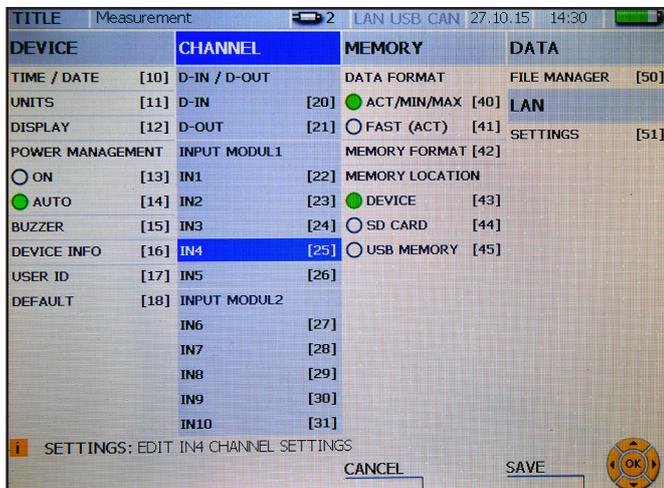

4. Configure the input as follows:

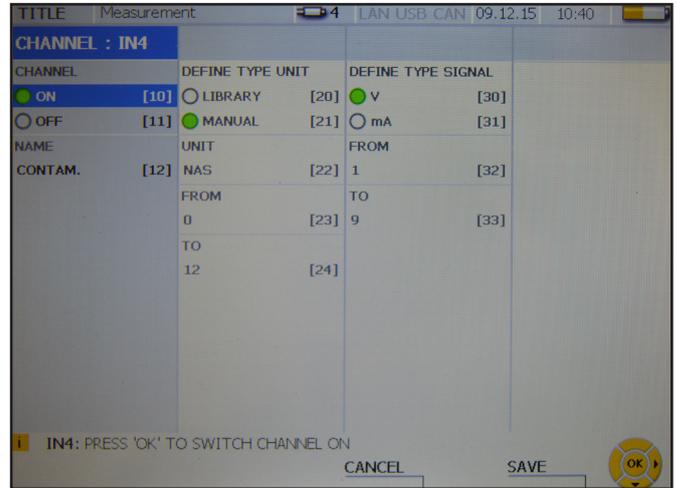

Field	Description
CHANNEL	Switch to ON to activate channel 4 / 9 (displays the channel in the value display)
NAME	Type "CONTAM."
DEFINE TYPE UNIT	Select 'MANUAL'
UNIT	Type 'NAS'
FROM	Type '0' (zero)
TO	Type '12' (Twelve)
DEFINE TYPE SIGNAL	Select 'V'
FROM	Type '1' (one)
TO	Type '9' (nine)

5. Select 'SAVE'.
6. Select 'IN5' or 'IN10'
7. Configure the input as follows:

Field	Description
CHANNEL	Switch to ON to activate channel 5 / 10 (displays the channel in the value display)
NAME	Type 'R/H'
DEFINE TYPE UNIT	Select 'MANUAL'
UNIT	Type '%'
FROM	Type '0' (zero)
TO	Type '100' (one hundred)
DEFINE TYPE SIGNAL	Select 'V'
FROM	Type '1' (one)
TO	Type '9' (nine)

\*Press the '1' key until the '%' symbol is shown.

8. Select 'SAVE' and then 'SAVE' again.
9. The HPM6000 is now configured to use the Contamination Monitor.

Read and follow instructions on the ICM and USBi800 Manuals to configure the ICM device to suit your requirements